## IMPORTANT.

## Please read carefully before operating tool.

- 1. Be sure air is in "OFF" position when connecting tool to air supply.
- 2. Always wear approved eue protection when using air tools. If raising dust, wear a suitable mask.
- 3. Be sure to disconnect tool from air supply before changing accessories. Performing service on tool, and when not in use.
- 4. As with any air tool, use common sense when operating. Do not wear loose clothing or jewelry that could become caught by moving parts, causing injury. Operate tool a safe distance from yourself and others in the work area.
- 5. To ensure long life of the air tool be sure to oil the tool daily before using. Simply pour 4 drops of air tool oil into air inlet and run too for a moment to clean.
- 6. Follow air source manufacturer's directions for connection of regulators, filters, and other accessories to air source. Do not install "quick couplers" directly on tool as they put unnecessary strain on the air inlet threads possibly causing them to wear out prematurely, instead, install them on a short length of air hose attached to the tool.

## WARNING!

Read, understand and follow all instruction and warnings before operating this tool. Failure to do so may result in personal injury and/or property damage and will void warranty.