

Cleaning Y-Strainer

312356C
EN



These instructions are provided as a quick maintenance guide. They are not meant to replace the instruction manual. See instruction manual for Warnings and information on the safe and proper operation of this equipment. It is important that you read and understand all instructions and hazards before operating this equipment.

						
PRESSURIZED EQUIPMENT HAZARD This equipment stays pressurized until pressure is manually relieved. To reduce the risk of serious injury from pressurized fluid, accidental spray from dispense valve or splashing fluid, follow steps 2-3 on page 2.						

Before you start

Be sure that you have the following items available:

- 9 in. crescent or open end wrench - 7/8 in.
- rag or soft-bristle brush
- water or cleaning solvent

PROVEN QUALITY. LEADING TECHNOLOGY.


Cleaning Y-Strainer



1. Locate waste oil pump. NOTE: In illustration above, suction hose has been removed.



2. Set air regulator pressure to zero psi and/or turn off main air supply.

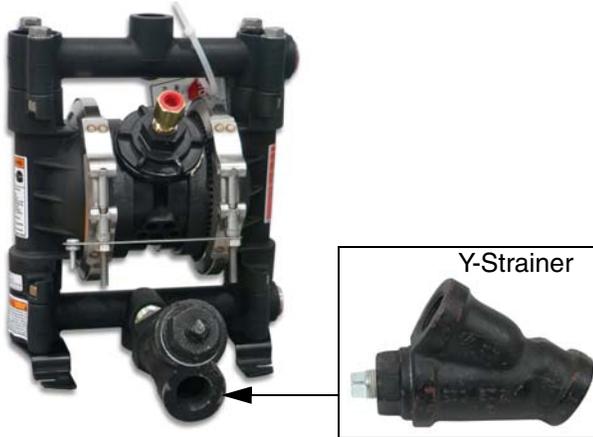

3. Locate Y-strainer in line at pump.



4. Use a wrench to loosen cap fitting located on the front of the Y-strainer.



5. Use your fingers to unscrew and remove fitting.



6. Remove screen/filter from Y-strainer.

7. Use a soft rag dampened with water or cleaning fluid to clean screen/filter. A soft-bristled brush may be used if necessary.



8. Examine screen/filter. If damaged, replace it with new 20 mesh screen, part no.: 129699. Install screen/filter into Y-strainer.



9. Replace and hand tighten fitting in Y-strainer. Use a wrench to tighten securely.

*All written and visual data contained in this document reflects the latest product information available at the time of publication.
Graco reserves the right to make changes at any time without notice.*

This manual contains English. MM 312356

For Patent information visit www.graco.com/patents

Graco Headquarters: Minneapolis
International Offices: Belgium, China, Japan, Korea
GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441
www.graco.com
Revised January 2017