

Feed Pump Kits

309815T

E١

For supplying polyurethane materials from 55 gal. (200 liter) drums to Reactor™ proportioning systems.


For professional use only. Not for use explosive atmospheres.



Important Safety Instructions

Read all warnings and instructions in this manual. Save these instructions.

See page 2 for a list of feed pump kits.

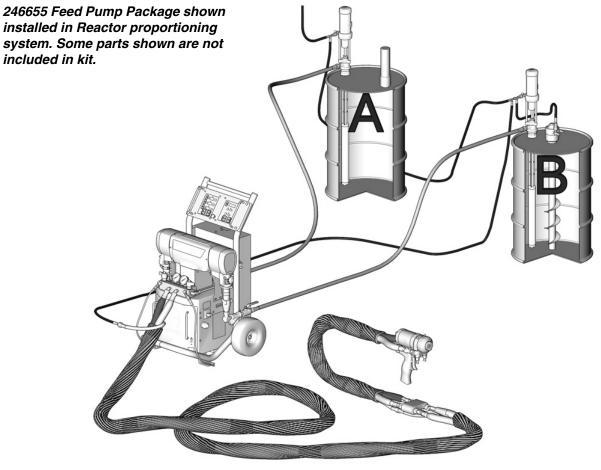

TI7690A

Contents

Related Manuals 3 Parts Manual Conventions 3 Complete Feed Pump Packages Installation 5 Fluid Supply Kits	10
Installation	11
• • • • • • • • • • • • • • • • • • • •	11
II I 4050 W II M II O D I I C	13
Husky 1050 Wall Mount	14
Standard 2:1 Kit	16
Operation	17
Startup 10 Graco Standard Warranty	18
Shutdown 10 Graco Information	18
Changing Drums	

Feed Pump Kits

Complete Package (fluid and air)	Pump Kit (1 pump and riser tube)	Pump Model	Maximum Air Input Pressure	Maximum Fluid Working Pressure
246369	246366	Husky [™] 515	100 psi (0.7 MPa, 7 bar)	100 psi (0.7 MPa, 7 bar)
246375	246367	Husky [™] 716	100 psi (0.7 MPa, 7 bar)	100 psi (0.7 MPa, 7 bar)
246376	246368	Husky [™] 1050	125 psi (0.86 MPa, 8.6 bar)	125 psi (0.86 MPa, 8.6 bar)
246655	246654	Triton™ 308	115 psi (0.8 MPa, 8 bar)	115 psi (0.8 MPa, 8 bar)
246081	246898	T2 2:1 Ratio	180 psi (1.2 MPa, 12.5 bar)	405 psi (2.8 MPa, 28 bar)
247955	247956	T1 2:1 Ratio	180 psi (1.2 MPa, 12.5 bar)	360 psi (2.5 MPa, 25 bar)
24Z987	24Z988	T3 3:1 Ratio	100 psi (0.69 MPa, 6.9 bar)	315 psi (2.17 MPa, 21.7 bar)
25D295	25D296	T3 CS 3:1 Ratio	100 psi (0.69 MPa, 6.9 bar)	315 psi (2.17 MPa, 21.7 bar)

Related Manuals

The following manuals are shipped with feed pump kits. Refer to these manuals for detailed equipment information.

Feed Pumps			
Part No.	Description		
308981	Husky 515 Pump		
308981	Husky 716 Pump		
312877	Husky 1050 Pump Operation		
313435	Husky 1050 Pump Repair-Parts		
309303	Triton 308 Pump		
311882	T2 2:1 Ratio Pump		
312766	T1 2:1 Ratio Pump		
3A5180	T3 3:1 Ratio Pump		

The following manuals are shipped with Reactor[™]. Refer to these manuals for detailed equipment information.

Reactor Electric Proportioner			
Part No.	Description		
312065	Reactor Electric Proportioner, Operation Manual (English)		
312066	Reactor Electric Proportioner, Repair-Parts Manual (English)		
312062	Reactor Hydraulic Proportioner, Operation Manual (English)		
312063	Reactor Hydraulic Proportioner, Repair-Parts Manual (English)		

The following manual is shipped with Fusion[™] spray gun. Refer to this manual for detailed equipment information.

Fusion Spray Gun		
Part No.	Description	
309550	Instruction Manual (English)	

Manual Conventions

Warning



A warning alerts you to possible serious injury or death if you do not follow instructions.

Symbols, such as fire, explosion, and electric shock (shown), alert you to a specific hazard and direct you to read the indicated hazard warnings on pages 4-4.

Caution



CAUTION

A caution alerts you to possible equipment damage or destruction if you do not follow instructions.

MARNING



FIRE, EXPLOSION, AND ELECTRIC SHOCK HAZARD

Solvent and fumes in work area can ignite or explode. To help prevent fire and explosion:

- Use equipment only in well ventilated area.
- Eliminate all ignition sources, such as pilot lights, cigarettes and plastic drop cloths (potential static arc).
- Do not plug or unplug power cords or turn lights on or off when flammable fumes are present.
- Keep the work area free of debris, including solvent, rags, and gasoline.
- Ground equipment and conductive objects. See **Ground system.**, page 6.
- Hold gun firmly to side of grounded pail when triggering into pail.
- Use only grounded hoses.
- If there is static sparking or you feel a shock, **stop operation immediately.** Do not use equipment until you identify and correct the problem.
- To avoid chemical reaction and explosion, do not use 1,1,1-trichloroethane, methylene chloride, other halogenated hydrocarbon solvents or fluids containing such solvents in pressurized aluminum equipment.



EQUIPMENT MISUSE HAZARD

Misuse can cause serious injury or death.

- For professional use only.
- Use equipment only for its intended purpose. Call your Graco distributor for information.
- Read manuals, warnings, tags, and labels before operating equipment. Follow instructions.
- Check equipment daily. Repair or replace worn or damaged parts immediately.
- Do not alter or modify equipment. Use only Graco parts and accessories.
- Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See **Technical Data** in all equipment manuals.
- Use fluids and solvents that are compatible with equipment wetted parts. See **Technical Data** in all
 equipment manuals. Read fluid and solvent manufacturer's warnings.
- Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces.
- Do not use hoses to pull equipment.
- Comply with all applicable safety regulations.



BURN HAZARD

This equipment is used with heated fluid, which can cause equipment surfaces to become very hot. To avoid severe burns:

- Do not touch hot fluid or equipment.
- Allow equipment to cool completely before touching it.
- Wear gloves if fluid temperature exceeds 110°F (43°C).



TOXIC FLUID OR FUMES HAZARD

Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.

- Read Material Safety Data Sheet (MSDS) to know the specific hazards of the fluids you are using.
- Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.



PERSONAL PROTECTIVE EQUIPMENT

You must wear proper protective equipment when operating, servicing, or when in the operating area of the equipment to help protect you from serious injury, including eye injury; inhalation of toxic fumes; and hearing loss. This equipment includes but is not limited to:

- Protective evewear.
- Gloves, clothing, and respirator as recommended by the fluid and solvent manufacturer.
- Hearing protection.

Installation

NOTE: For Husky 1050 Wall Mount Kit 246368, see page 9.

NOTE: For Standard 2:1 Kit 246081, see page 9.

1. Flush pumps before using.

NOTE: Feed pumps are tested with oil. Flush out oil with a compatible solvent before spraying. See **Flushing** in Reactor operation manual.



Read warnings, page 4. Flush equipment only in a well-ventilated area. Do not spray flammable fluids. Do not turn on heaters while flushing with flammable solvents.

2. Keep A and B components separate



To prevent cross-contamination of fluid, mark A component (ISO) pumps, hoses, and connections with red tape. Mark B component (RES) pumps, hoses, and connections with blue tape. Do not interchange or cross-connect A component and B component parts.

- 3. Position drums. Place A (ISO) and component B (RES) drums as desired. Air hose (C) connecting feed pumps is 15 ft (4.57 m) long. See Fig. 1.
- 4. Install pump kit (101).
 - Inspect bung o-ring (309) and gasket (303) in place. If either is worn or damaged, or if ISO shows signs of crystallization, replace. See page 16.
 - b. Remove elbow and 2 in. bushing supplied with desiccant dryer (6). Screw dryer 3/4 npt fitting into vent of A component (ISO) drum.

A CAUTION

Lubricate bung o-ring (309) with 217374 ISO Pump Oil each time you change drums. This keeps air and moisture from reacting with isocyanate and allows bung adapter to rotate freely.


c. Open drum bung hole.

A CAUTION

Tighten pump clamps and external fasteners before first use. See pump manual.


d. Place riser tube into drum. Tighten bung adapter (304) securely.

- 5. Connect fluid supply kit.
 - a. Install swivel union (102) in pump fluid outlet. Triton 308 only: Install 90° elbow (104) in pump outlet, then install swivel union (102) in elbow.
- 3 Used on Triton 308 packages only.

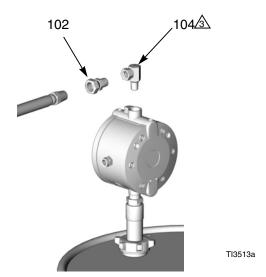

- b. Connect hose (103) between swivel union (102) and Reactor swivel inlet (D). See Fig. 1.
- 6. Install air supply kit (2).
 - Supply clean, dry, filtered air to feed pumps.
 - b. See manual 309827 to install air supply kit.


7. Ground system.

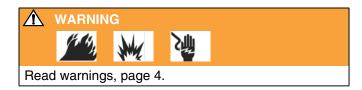

- a. *Feed pump:* follow instructions in separate feed pump manual, supplied.
- b. Reactor: see Reactor operation manual.
- c. Spray gun: see gun manual.
- d. Fluid supply containers: follow your local code.
- e. Object being sprayed: follow your local code.
- f. Solvent pails used when flushing: follow your local code. Use only metal pails, which are conductive, placed on a grounded surface. Do not place pail on a nonconductive surface, such as paper or cardboard, which interrupts grounding continuity.
- g. To maintain grounding continuity when flushing or relieving pressure, hold a metal part of spray gun firmly to the side of a grounded metal pail, then trigger gun.

Installation

246655 Package shown installed in Reactor proportioning system. Includes * parts only.

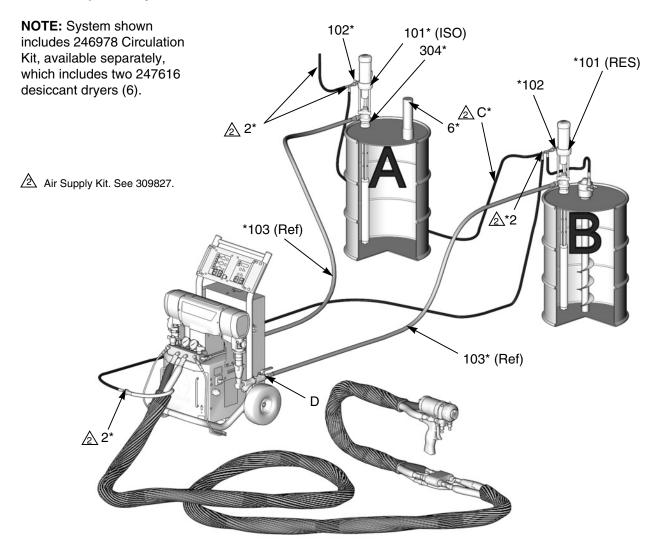

TI7690A

FIG. 1. Installation

Installation with Circulation (T3 Pumps)

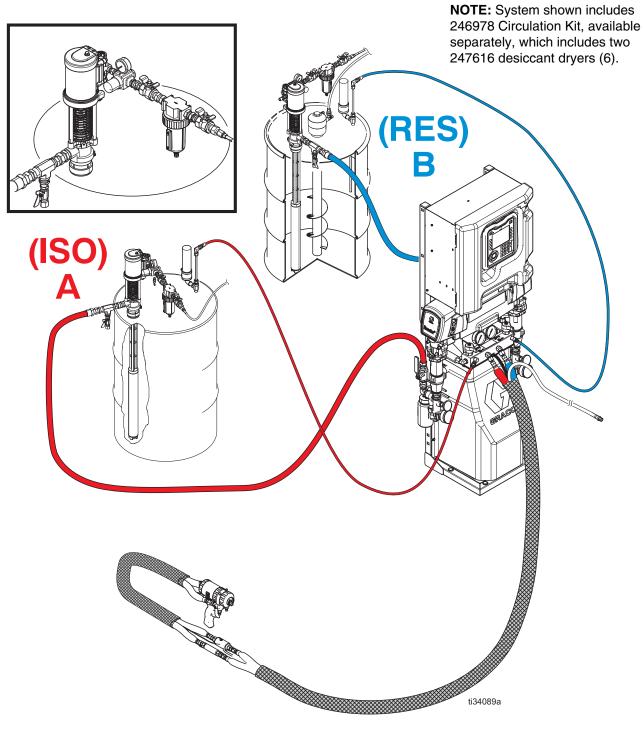


FIG. 2.

Husky 1050 Wall Mount

- Be sure wall can support weight of pump, hoses, and accessories, and can withstand stress during operation.
- Position wall bracket (204) no more than 5 ft (1.52 m) above floor. Check that bracket is level. Attach to wall, using screws long enough to keep bracket from vibrating. See Fig. 3.
- 3. Connect swivel union (205) to pump inlet.
- 4. Install bushing (3) in pump air inlet.
- 5. Install pump (201) on bracket (204) securely, using provided dampeners, washers, and lock nuts.
- 6. Connect elbow (206) to top of riser tube kit (202).
- 7. Connect suction hose (203) to elbow (206) and inlet swivel (205).
- 8. Follow steps 1-7, pages 5-6, to finish installation.

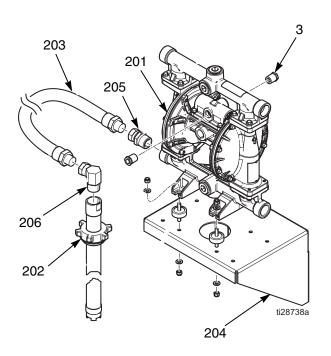


Fig. 3. Husky 1050 Wall Mount

Standard 2:1 Kit

- 1. Follow steps 1-3, page 5.
- Open drum bung hole. Screw bung adapter with gasket into bung hole. See pump manual 311882.
- 3. Install swivel fitting (1c) in pump fluid outlet. See Fig. 4.
- 4. Connect hose (1b) between swivel fitting (1c) and Reactor swivel inlet (D, see Fig. 1).
- 5. Remove elbow and 2 in. bushing supplied with desiccant dryer (6, see Fig. 1). Screw dryer 3/4 npt fitting into vent of A component (ISO) drum.
- 6. Follow steps 6-7, page 6, to finish installation.

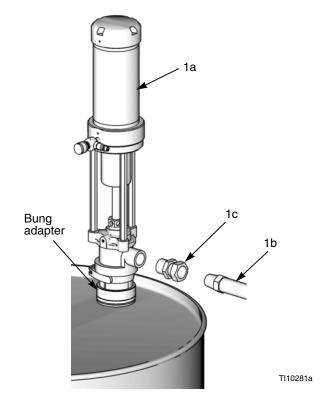


Fig. 4. Standard 2:1 Kit

Operation

Startup

- See Load fluid with feed pumps in Reactor operation manual.
- 2. Open feed pump air regulator.
- 3. Open feed pump bleed-type master air valve.
- 4. Adjust air to feed pump with needle valve.

NOTE: Cold, viscous material may be difficult to prime. Use needle valve to reduce air flow to motor.

NOTE: Do not plug or shut off pump fluid outlet when priming. Fluid must be free to flow through pump to prime.

NOTE: To increase pump flow rate and reduce icing, remove pump muffler. This will increase exhaust noise.

5. Never let pump run when drum is empty. A dry pump can accelerate and damage itself. If pump is running too fast, stop it immediately. Check and refill fluid supply, or flush with compatible solvent. Always prime entire system to remove any air. Do not let material harden in pump.

Shutdown

See Shutdown and Pressure Relief Procedure in Reactor manual. Close feed pump bleed-type master air valve.

Changing Drums

CAUTION

To prevent cross-contamination of fluid when changing drums, complete changing one component before changing second component.

- 1. See Shutdown.
- Remove riser tube from drum. Install in new drum. See Installation, page 5.
- 3. Lubricate bung o-ring (309), page 5.
- 4. See Load fluid with feed pumps in Reactor operation manual.

Maintenance

NOTE: See supplied pump manual for maintenance, repair, and parts information.

Lubricate bung o-ring (309) with 217374 ISO Pump Oil each time you change drums. This keeps air and moisture from reacting with ISO.

Whenever pump is removed from drum, inspect bung o-ring (309) and gasket (303) in place. If either is worn or damaged, or if ISO shows signs of crystallization, replace. See page 16.

Tighten pump clamps and external fasteners periodically. See pump manual.

1

Parts

Complete Feed Pump Packages


Part No. 246369, Husky 515 Package

Part No. 246375, Husky 716 Package	Ref.	Part	Description	Qty
, , , , , , , , , , , , , , , , , , ,	1	246481	FLUID SUPPLY KIT, Husky 515	1
Part No. 246376, Husky 1050 Package		246482	FLUID SUPPLY KIT, Husky 716	1
raitinoi 2 10070, ridony 1000 r donago			FLUID SUPPLY KIT, Husky 1050	1
Part No. 246655, Triton 308 Package		246677	FLUID SUPPLY KIT, Triton 308	1
,	2	246483	AIR SUPPLY KIT; see 309827	1
(shown)	3	100206	BUSHING, air inlet: 1/2 npt(m) x 1/4	2

npt(f); 246376 only; see page 15 for location

6 247616 KIT, desiccant dryer; for ISO side 1

7 104969 BUSHING, reducer; 1/2npt(m) x 3/4 npt(f); use on 1/2 in. ISO inlet hose (not shown)

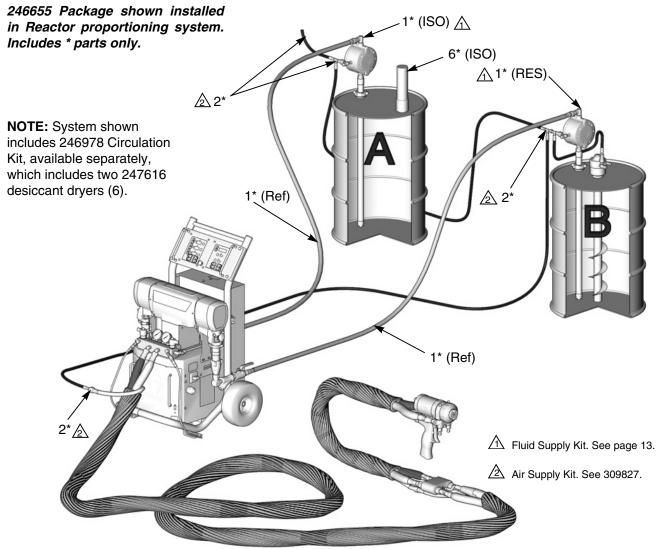

TI7690A


Part No. 246081, T2 2:1 Package

Ref.	Part 246898	Description KIT, fluid supply	Qty.	Ref.	Part 26A304
1a	295616	PUMP, 2:1; see 311882	2	2	246483
1b	217382	HOSE, fluid; 3/4 npt (mbe); 3/4 in. (19 mm) ID; 10 ft (3.05 m); nylon	2	3 5	217382 157785
1c	157785	FITTING, swivel; 3/4 npt(m) x 3/4 nps(f)	2	6	247616
1d	113344	1 \ /	1	Part	No. 25
		necessary to adapt 1/2 npt ISO inlet)		Ref.	Part 24Z834
2	246483	AIR SUPPLY KIT; see page 11 and 309827	1	2	246483 217382
6	247616	KIT, desiccant dryer; for ISO side; see page 11	1	3 5	157785

Part No. 247955, T1 2:1 Package


Ref. 1 1a 1b 1c* 1d	Part 247956 256200 217382 113344 113344	PUMP, 2:1; see 312766 HOSE, fluid; 3/4 npt (mbe); 3/4 in. (19 mm) ID; 10 ft (3.05 m); nylon FITTING, swivel; 1/2 npt(m) x 3/4 nps(f) FITTING, swivel; 1/2 npt(m) x 3/4 nps(f); (not shown) (use as necessary to adapt 1/2 npt ISO	Qty. 1 2 2 3 1
2	246483	inlet) AIR SUPPLY KIT; see page 11 and 309827	1
6	247616	KIT, desiccant dryer; for ISO side; see page 11	1

^{*}Use additional 1/2 NPT x 3/4 NPSF fitting to adapt to 1/2 NPT inlet if necessary.

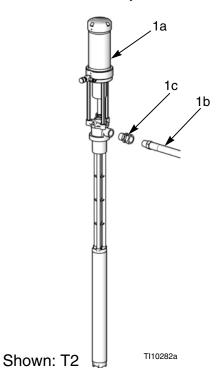

Part No. 24Z987, SS T3 3:1 Package

/. 1 2 2	Ref. 1 2 3 5	246483 217382 157785	Description PUMP, transfer, 3:1, T3 KIT, supply, air (feed pump, gun) HOSE, coupled, 10 ft FITTING, swivel KIT, accessory, desiccant dryer	Qty. 2 1 2 2 1
1	Part	No. 25E	0295, CS T3 3:1 Package	
1 1	Ref. 1 2 3 5	246483 217382	Description PUMP, T3, CS KIT, supply, air (feed pump, gun) HOSE, coupled, 10 ft FITTING, swivel	Qty. 2 1 2 2

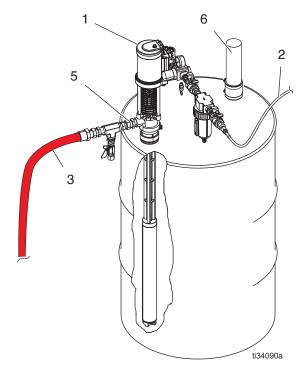

Fluid Supply Kits


Part No. 246481, Husky 515 Kit

Part No. 246482, Husky 716 Kit

Part No. 246676, Husky 1050 Kit

Part No. 246677, Triton 308 Kit (shown)

Ref.	Part	Description	Qty.
101	246366	PUMP KIT, Husky 515; 246481	2
	246367	PUMP KIT, Husky 716; 246482	2
	246368	PUMP KIT, Husky 1050; 246676	2
	246654	PUMP KIT, Triton 308; 246677	2
102	157785	UNION, swivel; 3/4 npt(m) x 3/4	2
		npsm(f); 246481 and 246482	
	202965	ÚNION, swivel; 1 in. npt(m) x 3/4	2
		npsm(f); 246676	
	113344	ÚNIOŇ, swivel; 1/2 npt(m) x 3/4	2
		npsm(f); 246677	
103	217382	HOSE, fluid; 3/4 npt (mbe); 3/4 in.	2
		(19 mm) ID; 10 ft (3.05 m); nylon	
104	217430	ELBOW, swivel; 90°; 3/8 npt(m) x	2
		1/2 npsm(f); 246677 only	
105	104969	BUSHING, reducer, 1/2 npt(m) x	1
		3/4 npt(f); use on 1/2 npt ISO inlet	
		hose (not shown)	

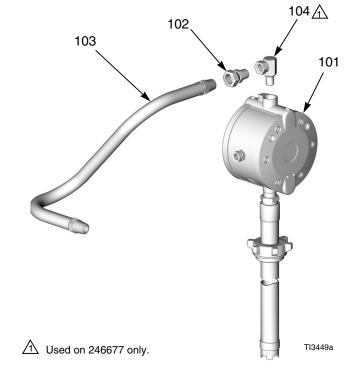


Pump Kits

Part No. 246366, Husky 515 Pump

Ref.	Part	Description	Qty.
201	246484	PUMP, Husky 515; see 308981	1
202	246419	and read CAUTION below RISER TUBE KIT; see page 16	1

CAUTION

246484 Husky 515 Pump is built specifically for use with isocyanates and is tested with oil. To order replacement parts and repair kits, refer to the Husky 515 parts list in manual 308981.

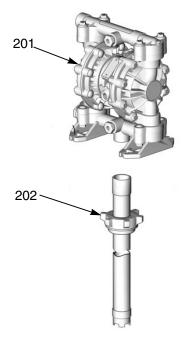


Part No. 246367, Husky 716 Pump

Ref.	Part	Description	Qty.
201	246485	PUMP, Husky 716; see 308981	1
		and read CAUTION below	
202	246419	RISER TUBE KIT; see page 16	1
203		NIPPLE, reducing; 1 in. npt x 3/4	1
		npt	

A CAUTION

246485 Husky 716 Pump is built specifically for use with isocyanates and is tested with oil. To order replacement parts and repair kits, refer to the Husky 716 parts list in manual 308981.

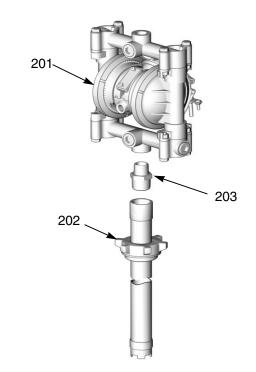

TI3450a

Qty.

1

1

Part No. 246368, Husky 1050 Pump

Part No. 246654, Triton 308 Pump

Description

Ref.

201

202

203

Part

233500


246419

158555


Ref.	Part	Description	Qty.
201	647673	PUMP, Husky 1050; see 312877 and 313435, and read CAUTION below	1
202	246419	RISER TUBE KIT; see page 16	1
203	214961		1
204	24C637	KIT, bracket, wall (includes mounting hardware)	1
205	202965	UNION, swivel, pump inlet;	1
206	107409	1 in. npt(m) x 3/4 npsm(f) ELBOW, swivel, riser tube; 90°; 1 in. npt(m) x 3/4 npsm(f)	1

٨	~ ^			
Λ	CA	IJT	IOI	١

647673 Husky 1050 Pump is built specifically for use with isocyanates and is tested with oil. To order replacement parts and repair kits, refer to the Husky 1050 parts list in manual 313435.

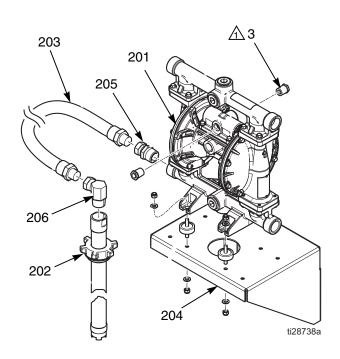



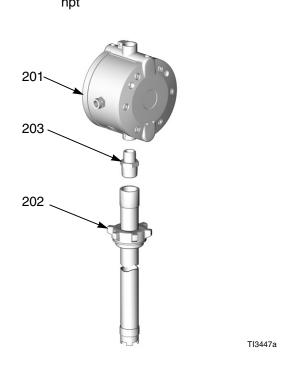

PUMP, Triton 308; see 309303 RISER TUBE KIT; see page 16 NIPPLE, reducing; 1 in. npt x 3/4

246419 Riser Tube Kit

Ref. 301 302 303 304 305 306 307 308 309	Part 159101 156592 106537 15B728 15B727 15B921 100279 159100 110831	Description HOUSING, valve, intake TUBE, riser GASKET, bung ADAPTER, bung FITTING; 1 in. npt SPACER BALL RETAINER, ball O-RING	Qty. 1 1 1 1 1 1 1 1 1	305	309/3	
				307	308	
			A	Lubricate with 217374 I each time you change of	SO Pump Oil drums.	Tl3445a

Technical Data

Category	Data
Maximum air input pressure	Husky 515: 100 psi (0.7 MPa, 7 bar)
	Husky 716: 100 psi (0.7 MPa, 7 bar)
	Husky 1050: 125 psi (0.86 MPa, 8.6 bar)
	Triton 308: 115 psi (0.8 MPa, 8 bar)
	T2 2:1 Ratio: 180 psi (1.2 MPa, 12.5 bar)
	T1 2:1 Ratio: 180 psi (1.2 MPa, 12.5 bar)
Maximum fluid working pressure	Husky 515: 100 psi (0.7 MPa, 7 bar)
	Husky 716: 100 psi (0.7 MPa, 7 bar)
	Husky 1050: 125 psi (0.86 MPa, 8.6 bar)
	Triton 308: 115 psi (0.8 MPa, 8 bar)
	T2 2:1 Ratio: 405 psi (2.8 MPa, 28 bar)
	T1 2:1 Ratio: 360 psi (2.5 MPa, 25 bar)
	T3 3:1 Ratio: 315 psi (2.17 MPa, 21.7 bar)
Wetted parts	Pump: see supplied pump manual
	Riser tube: carbon steel
	Fluid hoses: nylon
	Suction hose (Husky 1050 only): neoprene
	Fittings: carbon steel

Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO. These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

FOR GRACO CANADA CUSTOMERS

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

Graco Information

For the latest information about Graco products, visit www.graco.com.

For patent information, see www.graco.com/patents.

TO PLACE AN ORDER, contact your Graco distributor or call to identify the nearest distributor.

Phone: 612-623-6921 or Toll Free: 1-800-328-0211 Fax: 612-378-3505

All written and visual data contained in this document reflects the latest product information available at the time of publication.

Graco reserves the right to make changes at any time without notice.

Original instructions. This manual contains English. MM 309815

Graco Headquarters: Minneapolis International Offices: Belgium, China, Japan, Korea

GRACO INC. P.O. BOX 1441 MINNEAPOLIS, MN 55440-1441

Copyright 2003, Graco Inc. is registered to ISO 9001 www.graco.com Revision T, October 2018